

STAINLESS STEEL NOCOSPRAY

The portable stainless steel aerial surface bio-disinfection device.



Manufactured in France by Oxy'Pharm according to ISO 13485.

Stainless steel nocospray is a portable surface bio-disinfection device, developed for industrial use. It ensures aerial surface disinfection or disinsectisation when used along with our Nocolyse or Oxyphy ranges. A dry fog allows a uniform treatment of every cm² of surfaces, as a preventive or curative measure. Treatment of volumes from 10 to 1,000 m³.



EASY TO USE

Easy adjustment for the volume of the room to be treated thanks to its touchpad.



ECONOMICAL

Very small amount of product required.



GUARANTEED TIME SAVING

No preparation required before treatment (except for cleaning) or after treatment (no need to wipe or ventilate).

COMPATIBILITY

- Disinfectant bottles (1 L): Nocolyse, Nocolyse+, Nocolyse Food, Nocolyse One Shot.
- Insecticide bottles (1 L): Oxyphy, Oxyphy+.

PRECAUTIONS FOR USE

Read all product information before use. Instructions for use are available on request by email: info@oxypharm.net


TECHNICAL CHARACTERISTICS

Dimensions (L x W x H cm)	49.4 x 30 x 34.2 cm
Empty weight	6.5 kg
Packaging	
- Dimensions (L x W x H cm)	60 x 42 x 42 cm
- Weight	9 kg
Maximal treatment volume	1,000 m ³
Turbine speed	22,000 rpm
Output speed of the mist	80 m/s
Average liquid flow rate	1,000 ml/h
Storage conditions	
- Temperature	0°C to 70°C
- Hygrometry	10% to 95%
Power	1,000 W
Average particle size	<5 µ

REFERENCES

DEVICE	REFERENCE
Stainless steel nocospray 230 V	3004.023
Stainless steel nocospray 115 V	3004.024

THE BIO-DISINFECTION PROCESS

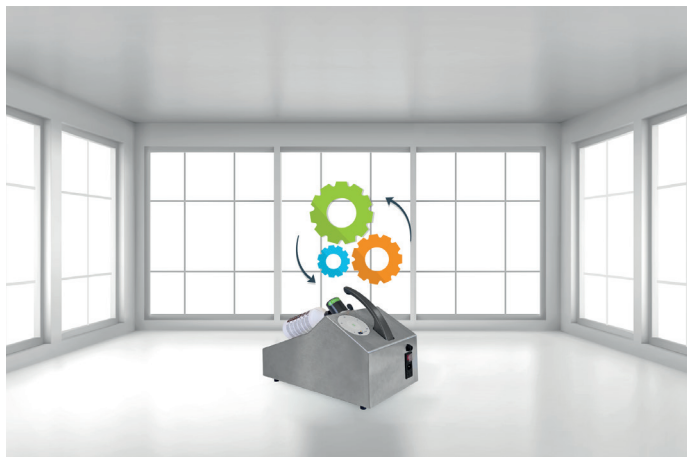


1. INSTALLATION

Installation of the Stainless steel NOCOSPRAY system in the room to be treated.




2. SPRAYING

Spraying of the product in the form of a dry mist in the room to be treated, evenly over all accessible surfaces.

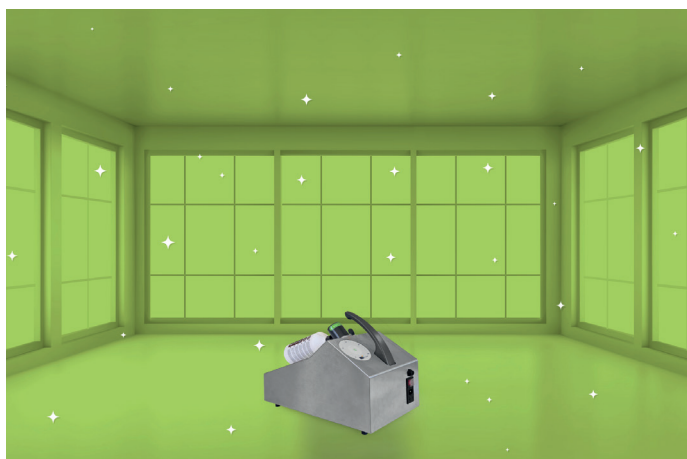

3. CONTACT TIME

The dry mist remains suspended in the air and eliminates all micro-organisms (viruses, bacteria, spores, yeasts, etc.) present on the accessible surfaces of the room.

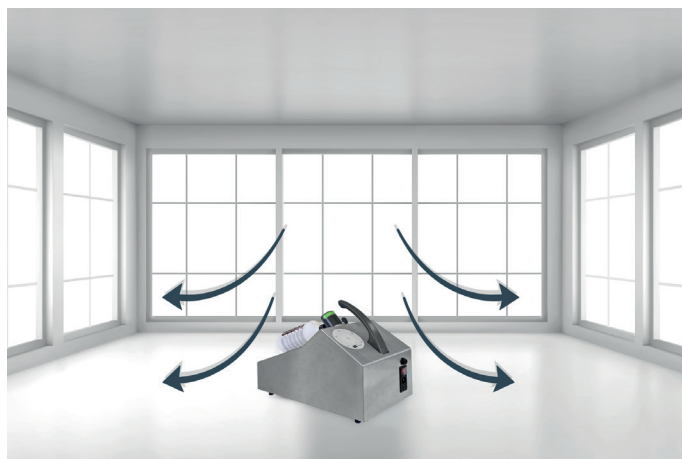

4. BIODEGRADATION

The dry mist naturally degrades without leaving any residue and without corroding surfaces (including electronic and mechanical ones). No need to wipe or ventilate.

ACCESSORIES



The programmer

Allows for delayed activation of the device.



The wall crossing system

Allows you to treat a room without entering it.




Nocotest

Checks the proper distribution of the products on the surfaces.



The remote control

For triggering the broadcast from outside the room.

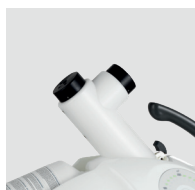

The double nozzle

For two-way spraying suitable in long, narrow spaces.



Nocobox

Allows control of the microbiological efficiency obtained.